

Step 1: Identify your machine

In order for Uniflex Hydraulik Service to be able to help quickly, two pieces of information about your machine are important: the serial number and the machine type. Both can be found on the nameplate, which can be located in different places depending on the machine, or you can find it on the cover in the operating instructions supplied with the machine.

This description of the type plate will help you to determine the position of the type plate on your machine and thus to identify the device and the spare parts.

1. The 5-digit serial number. On the nameplate at position, 2".
2. The designation of the machine type of your device. Identified on the nameplate by a "1".

